



Installation Instructions
for
Driving Lamp Brackets
for
NightCrawler™ *Modular* Front Bumper

Thank you for purchasing your new Skid Row Offroad Driving Lamp brackets for your NightCrawler™ *Modular* front bumper. They will allow you to install 3"x5" driving lamps or fog lamps. We recommend KC HiLiTES Wide Beam LX2 Driving Lights, model # 775. These high quality lights come complete with a wiring harness to make for a quick and easy installation. **Please Note: LIGHTS ARE SOLD SEPARATELY.**

Your light bracket package should come complete with the following parts:

1. (2) Light Brackets
2. (4) 5/16-18 x 1.0" Carriage Bolts
3. (4) 5/16" Lock Washer
4. (4) 5/16" Flat Washer
5. (4) 5/16-18 Hex Nuts


Step 1: Installation of the light brackets must be done with the bumper off the vehicle.

Step 2: Attach the driving lamp to the mounting bracket first. Make the mounting hardware snug, but still loose enough to adjust the light once the bracket is installed.

Step 3: Attach the light bracket to the bumper as shown and tighten the hardware.

Step 4: Adjust the position of the lights and tighten the mounting hardware. Final adjustment must be with the bumper installed.

Step 5: Install the bumper.

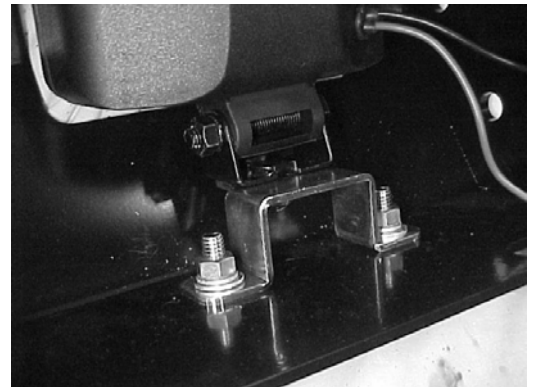

We hope you enjoy your new driving lamps in your Skid Row Offroad NightCrawler™ *Modular* front bumper!

Sincerely,

The Staff at SFK Manufacturing, LLC

SFK Manufacturing, LLC
PO Box 306, Shermans Dale,
PA 17090
Phone 717-582-3640
Fax 717-582-2640

www.SkidRowOffroad.com



*You could win a cool Skid Row Offroad
jacket customized just for you
by registering your new purchase at
www.SkidRowOffroad.com/registration/*

Annual Drawing to be held January 1st. Winner to be selected from all entries from prior year.
All entries must be received by December 31st to be included in drawing.
One entry per person per Skid Row Offroad product purchased.