



Installation Instructions

For

Front Skid Plate, TA-1001

For

1999-2006 Toyota Tundra & Sequoia

Thank you for purchasing your new Skid Row Offroad front skid plate. It is designed to give you peace of mind while traversing even the toughest trails.

Your skid plate package should come complete with the following parts:

- | | |
|----------------------------------|----------------------------|
| 1. (1) Front Skid Plate | 3. (2) ½” Aluminum Spacers |
| 2. (2) 8-1.25x35mm Hex Head Bolt | 4. (2) 3/8” Flat Washers |

Step 1: Remove the factory front skid plate and plastic “mud guards”.

Step 2: Using a floor jack, lift the new front skid plate into place.


Step 3: Using the factory hardware just removed, install the three bolts at the front of the skid plate.

Step 4: Again, using the factory hardware just removed, install two bolts at the rear of the skid plate.

NOTE: Depending upon the condition of your truck these two holes may need to be tapped to clean out the factory threads. The tap size is 8x1.25mm.

Step 5: As shown to the right, insert two ½” spacers (one per side) between the middle of the skid plate and the chassis cross-member and then install the new longer 8x1.25x35mm bolts that are included. Be sure to use the flat washers with these two bolts.

Step 6: Tighten all seven bolts and you’re ready to hit the trail!

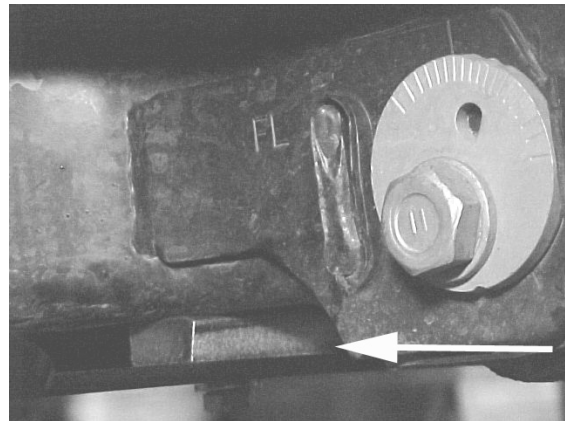

We hope you enjoy your new Skid Row Offroad front skid plate!

Sincerely,

The Staff at SFK Manufacturing, LLC

SFK Manufacturing, LLC
PO Box 306, Shermans Dale, PA 17090
Phone 717-582-3640
Fax 717-582-2640

www.SkidRowOffroad.com



You could win a cool Skid Row Offroad jacket customized just for you by registering your new purchase at www.SkidRowOffroad.com/registration/

Annual Drawing to be held January 1st. Winner to be selected from all entries from prior year. All entries must be received by December 31st to be included in drawing. One entry per person per Skid Row Offroad product purchased.