



Installation Instructions for Transfer Case Skid Plate for 1999-2006 Toyota Tundra

Thank you for purchasing your new Skid Row Offroad transfer case skid plate. It is designed to give you peace of mind while traversing even the toughest trails.

Your skid plate package should come complete with the following parts:

- | | |
|---|---------------------------|
| 1. (1) Transfer Case Skid Plate | 4. (4) 3/8-16 UNC Hex Nut |
| 2. (4) 3/8-16 UNC x 1.5" Hex Head Bolts | 5. (6) 3/8" Lock Washers |
| 3. (2) 3/8-16 UNC x 3" Hex Head Bolt | 6. (2) 3/8-16 Nut Plates |

Step 1: Lift the new transfer case skid plate into place as shown to the right. There should be existing holes in the chassis in locations 1 and 2 indicated by the arrows.

Step 2: Install two 3/8-16 UNC x 1.5" hex head bolts, lock washers, and nuts into the holes indicated by the arrow 1. Leave the bolts loose.


Step 3: Install the two 3/8-16 UNC x 3" hex head bolts, lock washers, and nut plates through the transmission cross-member shown by arrow 2 and then tighten. The nut plates go on top of the cross-member.

Step 4: Tighten the two bolts from step 2.

Step 5: Drill two 3/8" holes through the chassis using the holes in the skid plate as a guide in the area indicated by arrow 3.

Step 6: Install the remaining 3/8-16 UNC x 1.5" hex head bolts, lock washers, and nuts and tighten.

Step 7: You're ready to hit the trail!

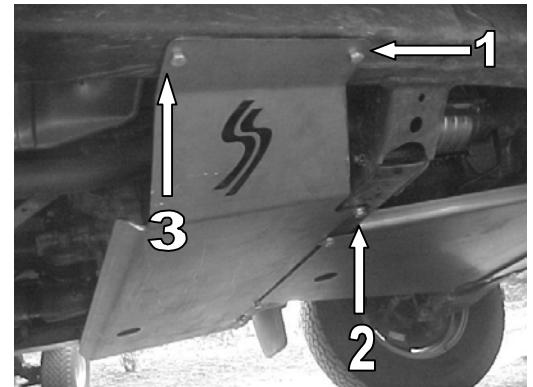

We hope you enjoy your new Skid Row Offroad transfer case skid plate!

Sincerely,

The Staff at SFK Manufacturing, LLC

SFK Manufacturing, LLC
PO Box 306, Shermans Dale,
PA 17090
717-582-3640
Fax 717-582-2640

www.SkidRowOffroad.com



You could win a cool Skid Row Offroad jacket customized just for you by registering your new purchase at www.SkidRowOffroad.com/registration/

Annual Drawing to be held January 1st. Winner to be selected from all entries from prior year. All entries must be received by December 31st to be included in drawing. One entry per person per Skid Row Offroad product purchased.